



	Power
	Mute
1	Num 1
2	Num 2
3	Num 3
4	Num 4
5	Num 5
6	Num 6
7	Num 7
8	Num 8
9	Num 9
0	Num 0
	Clear
EXIT	Exit
	SET
	Menu
	Home
	Back
OK	OK
+	Vol +
-	Vol -
	CH
	CH
TV	TV
EPG	EPG
	Video_RW
	Video_Play_Pause
	Video_STOP
	Video_FW
APP	APP
	Video_Next
	Video_Prev
	A/R